

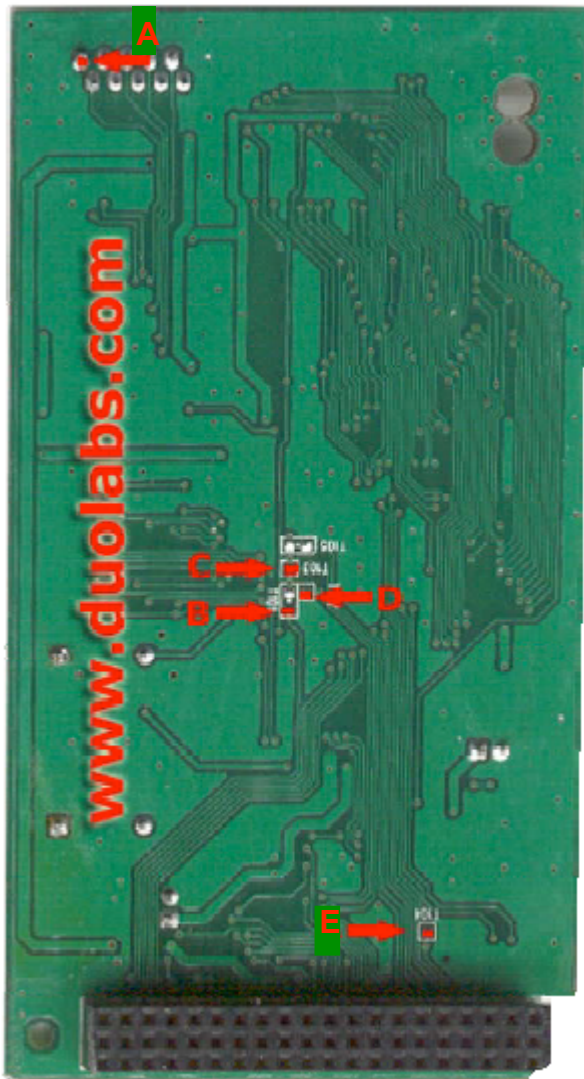


CONNECTION BETWEEN NEXTWARE AND CAS2 CONNECTOR

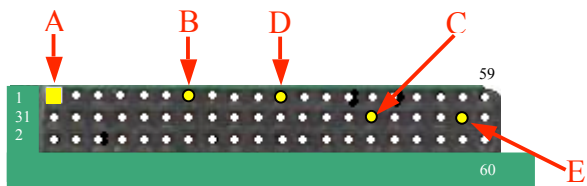

A connected to pin 1 del cas2 interface
B connected to pin 17 del cas2 interface
C connected to pin 18 del cas2 interface
D connected to pin 16 del cas2 interface
E connected to pin 15 del cas2 interface

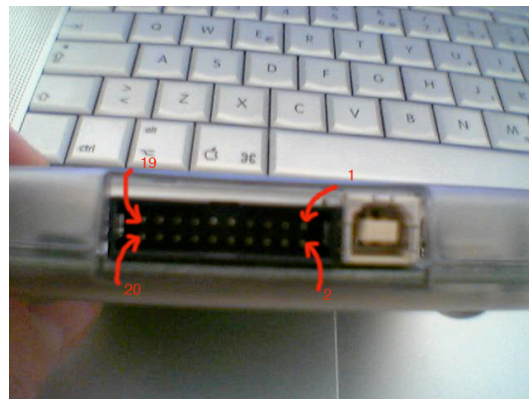

THE CABLE MUST BE MAX 10 cm LONGER